

# Installation Instructions

## CS-1

### Control Switch Safety Cover

The installation of the CS-1 can be completed with just a flat blade screw driver in just a few minutes.

There are three parts to the CS-1”

1. Main Switch Cover
2. Top Switch Lock
3. Bottom Switch Lock



The CS-1 is also provided with three 10 x 32 machine screws that are slightly longer than the screws presently holding the control switch escutcheon plate to the relay panel or electrical enclosure. These screws provide the extra length that maybe required when the Top and Bottom Switch Lock parts are installed between the panel and the escutcheon plate.

**CAUTION:** When installing the CS-1, care should be taken not to operate the control switch in an undesired direction. Only qualified persons who are familiar with the control system which the control switch is are part of, should install the CS-1.

#### Step 1

Firmly grip the control handle and remove the screw which holds the handle to the control switch. Care should be taken not to turn the handle in an undesired direction. Remove the control switch handle



#### Step 2

One at a time, remove the existing mounting screws from

the control switch and replace them with the provided screws. When installing the new screws do not tighten at this time

#### Step 3

Locate the Top Switch Lock and place it between the control switch escutcheon plate and the panel.



#### Step 4

Locate the Bottom Switch Lock and place it between the control switch escutcheon plate and the panel. While holding it in place tighten the 10 x 32 mounting screws.



#### Step 5

Test the alignment of the Top and Bottom Switch Locks by installing the clear Main Cover. Slide the bottom of the cover under the Bottom Switch Lock first and then move upward until the top of the Main cover will go over the Top Switch Lock. Test the Locking tab will prevent the Main cover from unlatching the top when the tab is in the locked(up) position. Adjust bottom Switch Lock as required and tighten screws.

Replace the Control Switch handle with care and begin to use the CS-1 Control Switch Cover.

