SENTINEL
CONTROL PRODUCTS, LLC

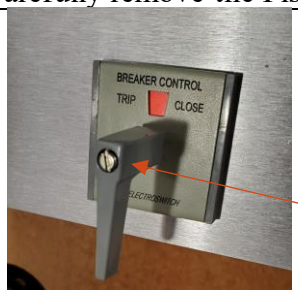
"CS-20"

Control Switch Safety Cover
For Physical Security

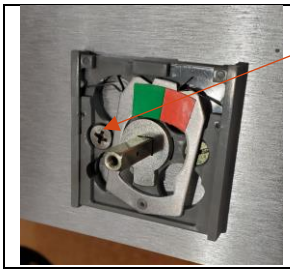
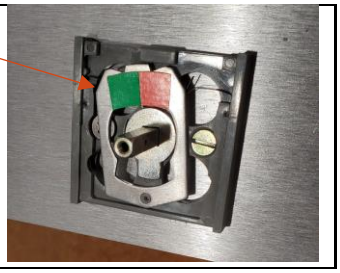
Installing the "CS-20 Control Switch Safety Cover" on the Electroswitch 20KD-38 breaker control switch

Note: Only qualified persons who are familiar with the control system should install the CS-20.

Carefully remove the Pistol Grip Handle.

	**Ensure the control system is not active and operation of the handle will not operate the system with an undesirable result.** Remove screw and pistol grip handle.	

	Using a flat blade screwdriver. A slight twist of the screwdriver should release the plate.	Remove the escutcheon plate	

	Replace the existing screws with the provided screws. These are 1/8" longer to accommodate the added thickness	Shift the indicator mechanism to the opposite position to gain access to the second screw.	

SENTINEL CONTROL PRODUCTS, INC

LaGrande, OR 97850
Phone: (503) 383-6528
Email: info@sentinelcontrolproducts.com

Since 2014

UL File 480471

www.SentinelControlProducts.com

Pull the escutcheon plate away from the panel in insert the back of the cover.		Adjust and straighten as required, Tighten the screws and replace the indicating plate.	
	Check the CS-20 cover operates freely. Adjust as required. Replace the cover plate.		Check for **clearance between the pistol grip handle and the escutcheon plate**, when the screw is tightened.
A small amount of material can be removed from the base of the handle to ensure free movement.		If required, this is best done at a disc or belt sander.	
		The CS-20 is now ready to help protect the "Electroswitch" 20KD from accidental operation.	

The CS-20 Control Switch Safety Cover is intended for indoor use only.

SENTINEL CONTROL PRODUCTS, INC

LaGrande, OR 97850
Phone: (503) 383-6528
Email: info@sentinelcontrolproducts.com

Since 2014

UL File 480

www.SentinelControlProducts.com